



1. Check that the Wall Outlet has power. Grab another appliance that plugs in like a light, blow dryer or toaster and see if it works in the outlet.
2. Verify the Air Tubing is securely attached to the bottom of the Receptacle.
3. Verify the Garbage Disposal Plug is pushed all the way in the Receptacle.
4. Verify the Receptacle is pushed all the way in the Wall Outlet
5. Using the allen wrench provided (it is normally taped to the pipe next to the garbage disposal) manually turn the garbage disposal blades to clear any debris in the disposal. There is a slot centered on the underside of the garbage disposal to insert the allen wrench. Before inserting the allen wrench unplug the disposal from the air switch receptacle.
6. Rest the garbage disposal by pushing the red button found on the underside of the disposal. Verify that the Disposal Plug is plugged into the Receptacle before pushing the red button. The disposal will not rest without power.

****Please remember that it is never recommended to run the garbage disposal without water running into the garbage disposal****