


Removal and Re-installation of Flush-face fireplace Door



Flush Face Fireplace Door removal tool (Supplied with fireplace)

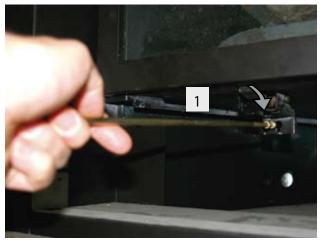


Step 1

Firmly grasp hand-hold end of tool and place the machined end in the slot under door frame. (as shown)



Step 3

Pull the tool toward you, releasing the spring tension. (as shown). (Caution: The latch springs back with force, hold the tool securely).

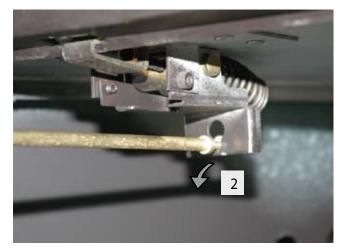

Step 2

Ensure the tool is firmly in the lower end of the slot, (as shown). (Caution: hold the tool securely).



